

MEGA M4PI/M4P PENDANT DIRECT/INDIRECT INTEGRAL DRIVER INSTALLATION INSTRUCTIONS

<u>NOTE</u>


The following instructions provide general guidelines for product installation. These instructions apply to the A4PI and M4PI sized fixtures. For additional information consult the applicable electrical codes or contact factory directly for support before attempting anything with uncertainty.

WARNING

Risk of fire and electrical shock. **DISCONNECT POWER AT ELECTRICAL PANEL** before installing or servicing this product.

GENERAL SAFETY INSTRUCTIONS

- Read all instructions prior to installing this fixture.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- All wiring must be performed by a qualified electrician in accordance with national and local building and electrical codes.
- This fixture must be suitably grounded for your protection against shock hazards and to assure proper operation.
- Make sure that the power source conforms to the requirements of this fixture.

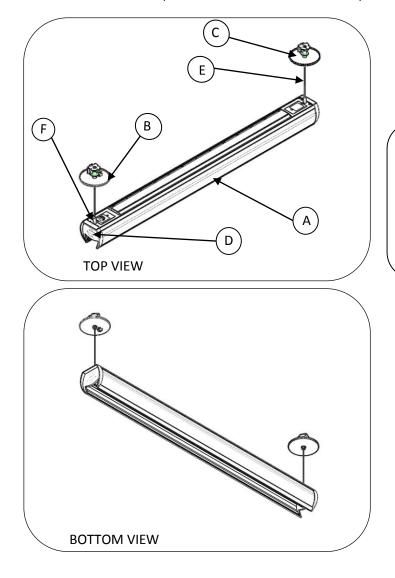


PARTS LIST:


- A. Luminaire
- B. Wire entry canopy
- C. Non-Wire entry canopy
- D. End Cap
- E. Aircraft Cable
- F. Gripper



WIRING DIAGRAM

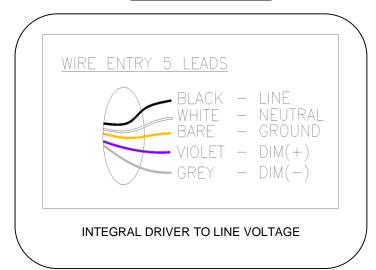



INSTALLATION STEPS

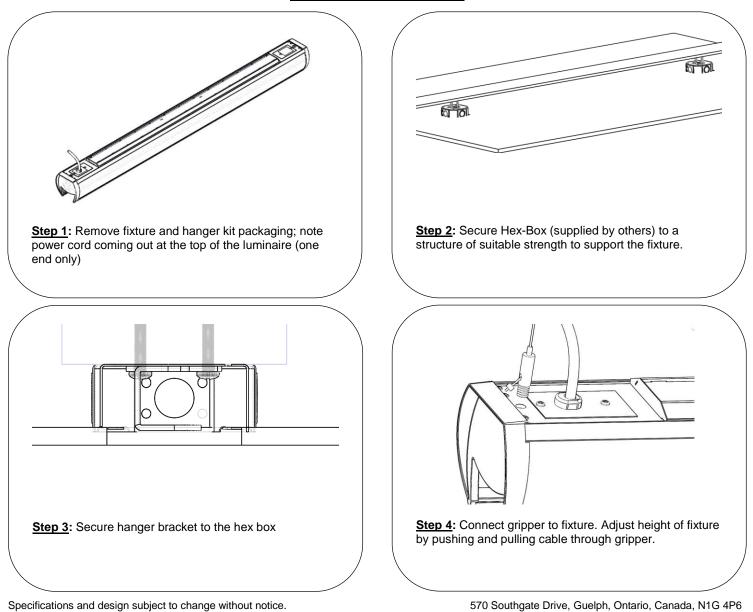

Phone: 800-621-6785 Fax: 519-822-4589


www.metalumen.com

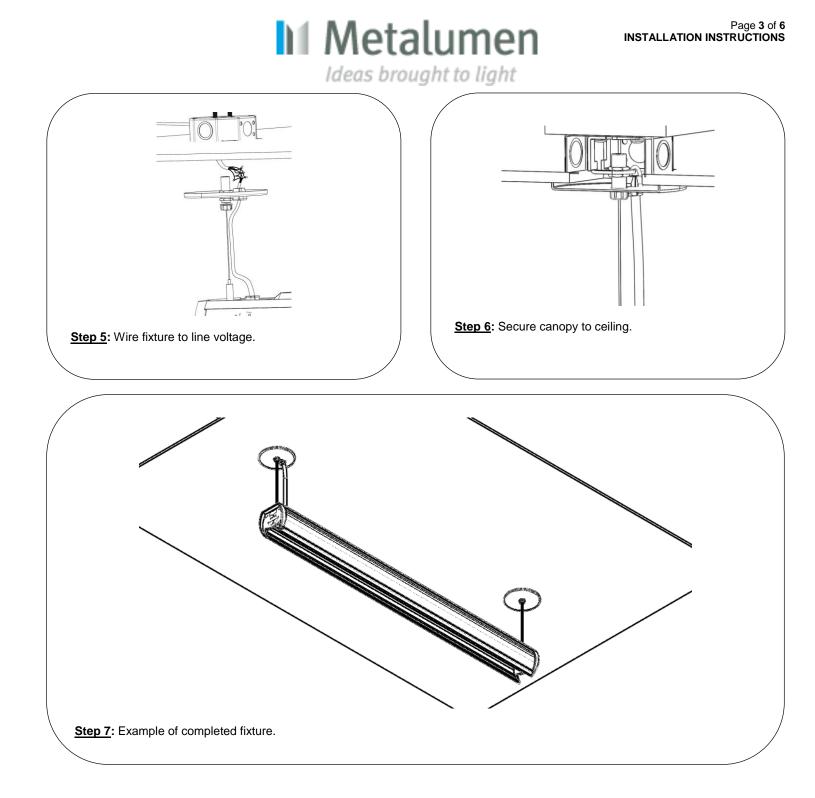

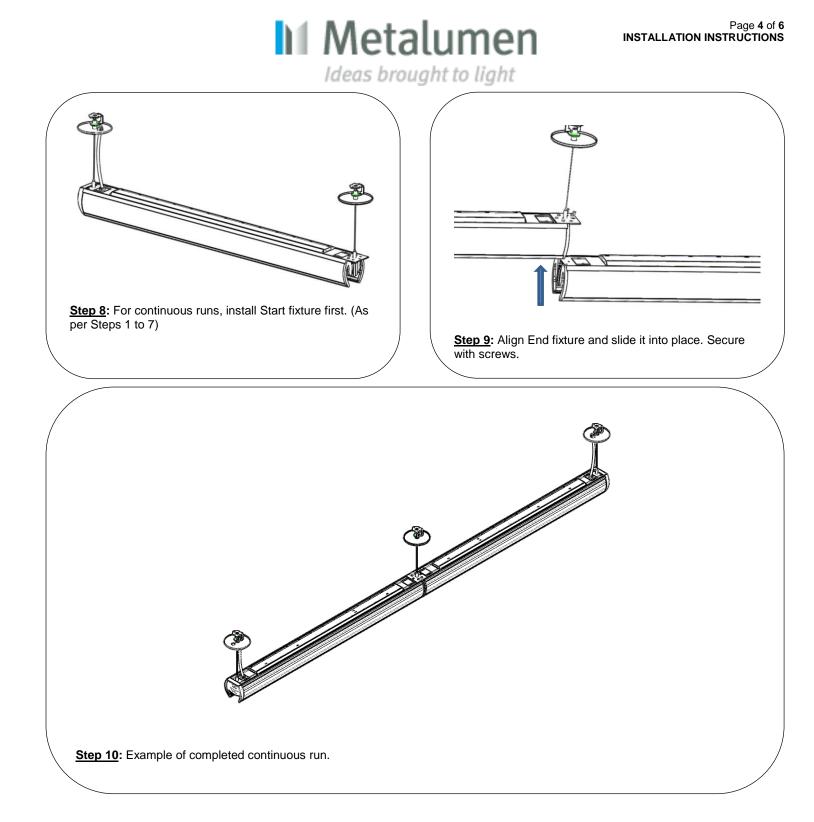




MAINTENANCE STEPS

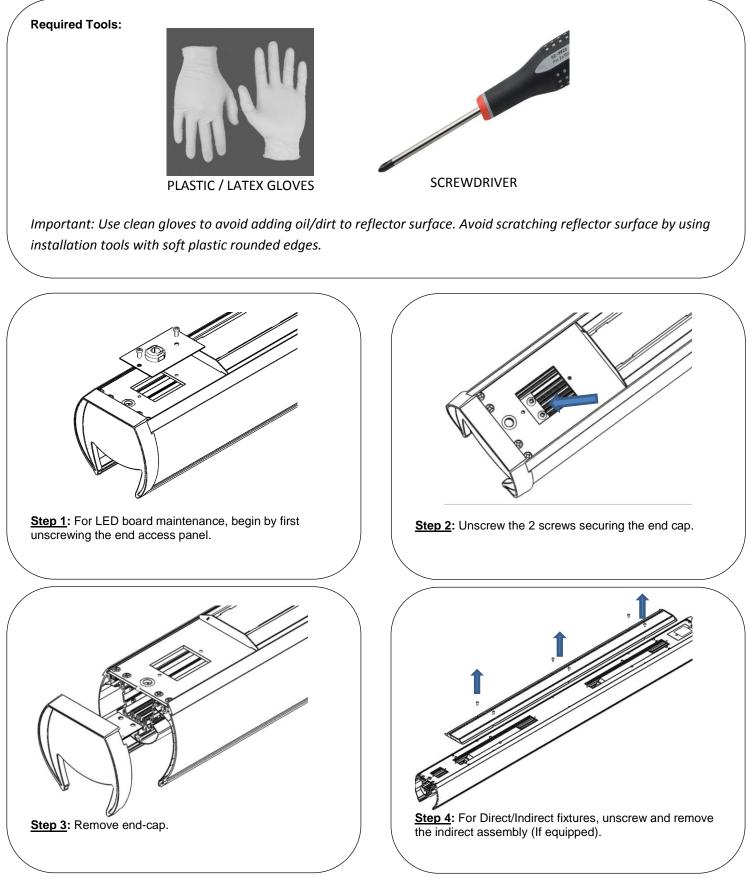


Specifications and design subject to change without notice. www.metalumen.com

Page 6 of 6 INSTALLATION INSTRUCTIONS

Metalumen Ideas brought to light

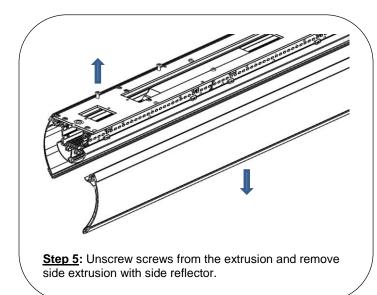

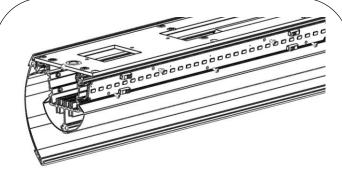

<u>Step 6</u>: Unhook power wires to the LED board and unscrew the LED screws to remove the LED board.