

NATA SERIES DOUBLE WALL MOUNT DIRECT-INDIRECT/INDIRECT INTEGRAL/REMOTE DRIVER

NOTE:



The following instructions provide general guidelines for product installation. These instructions apply to NATA fixtures. For additional information consult the applicable electrical codes or contact the factory directly for support before attempting anything with uncertainty.

WARNING:

Risk of fire and electrical shock. **DISCONNECT POWER AT ELECTRICAL PANEL** before installing or servicing this product.

GENERAL SAFETY INSTRUCTIONS:

- Read all instructions prior to installing this fixture.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- All wiring must be performed by a qualified electrician in accordance with national and local building and electrical codes.
- This fixture must be suitably grounded for your protection against shock hazards and to assure proper operation.
- Make sure that the power source conforms to the requirements of this fixture.
- Class 1 luminaire.
- The Minimum installation height must be 12' from the floor.
- Fixtures can only be serviced by certified personnel.

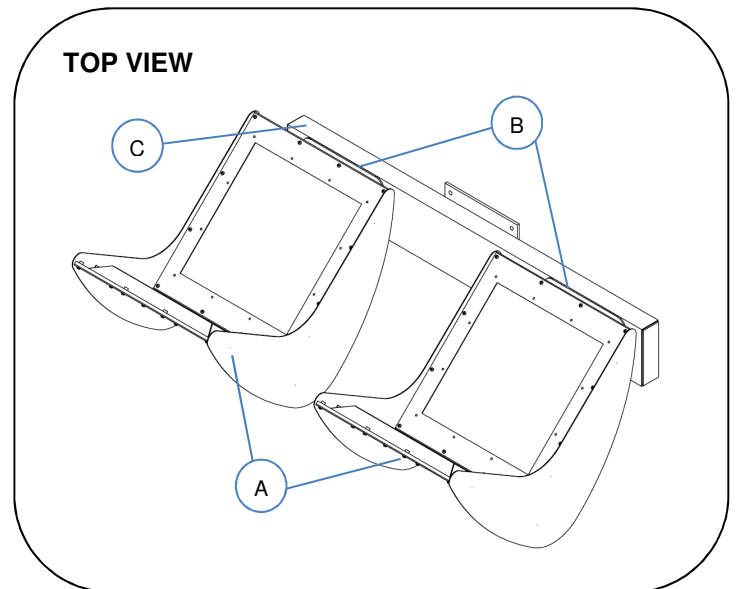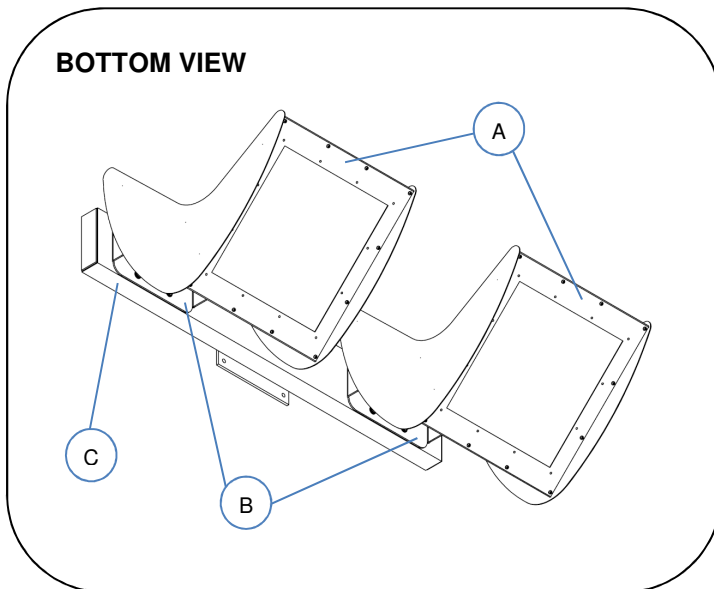

DIRECT-INDIRECT INTEGRAL/REMOTE DRIVER PARTS LIST:

- A – Luminaire fixture
- B – Fixture mounting bracket
- C – Mounting Bracket

