

IS-0244-01 rev.00 GRANDE RECESSED TBAR FLUORESCENT INSTALLATION INSTRUCTIONS


<u>NOTE</u>: The following instructions provide general guidelines for product installation. For additional information consult the applicable electrical codes or contact factory directly for support before attempting anything with uncertainty.

CAUTION: Do not assemble fixture runs on floor.

WARNING: Risk of fire and electrical shock. **DISCONNECT POWER AT ELECTRICAL PANEL** before installing or servicing this product.

General Safety Instructions:

- 1. Read all instructions prior to installing this fixture.
- 2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- 3. All wiring must be performed by a qualified electrician in accordance with national and local building and electrical codes.
- 4. This fixture must be suitably grounded for your protection against shock hazards and to assure proper operation.
- 5. Make sure that the power source conforms to the requirements of this fixture.

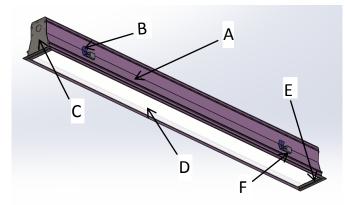


MAIN PARTS LIST:

- A. Luminaire enclosure
- B. Tbar Hanger Bracket
- C. End plate
- D. Lens
- E. Lens Filler & Magnet
- F. Retainer Clip

OTHER PARTS:

- Reflector
- Lamp (supplied or by others)

Wiring Diagram:

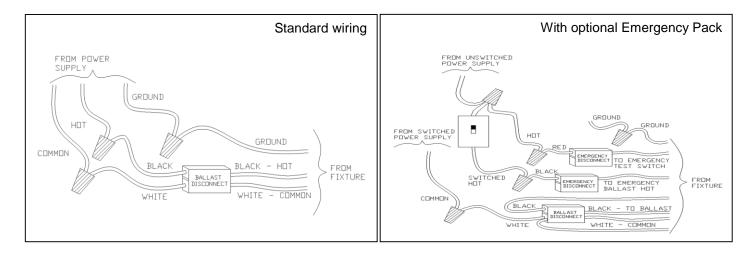


Metalumen

Ideas brought to light


GRANDE RECESSED TBAR FLUORESCENT INSTALLATION INSTRUCTIONS

Step-by-step Instructions:


IS-0244-01 rev.00

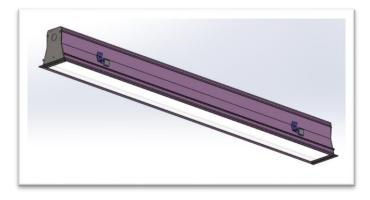


<u>Step 1</u>: Remove fixture packaging; note marked supply wires coming out at one end of the luminaire.

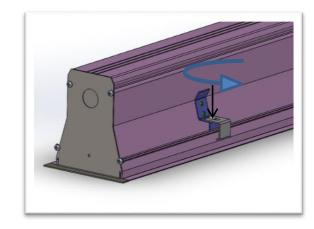


<u>Step 2</u>: Ensure Retainer clip (F) is loose. If not, loosen retainer clips (4)

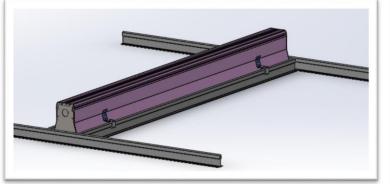


<u>Step 3:</u> Place Luminaire Fixture (A) into ceiling and rest on tbar.

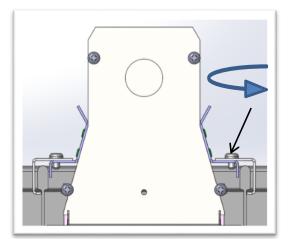

<u>Step 5</u>: Once Retainer clips are tight against tbar fasten screws to secure Retainer Clips in location.

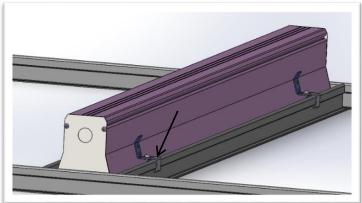

Step 4: Adjust Retainer Clips so its sits tight against tbar.

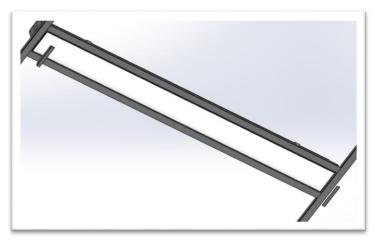


Step 6: Remove lens filler and magnet (E)


IS-0244-01 rev.00 GRANDE RECESSED TBAR FLUORES DENT METALLATION INSTRUCTIONS

Ideas brought to light


Step-by-step Instructions:

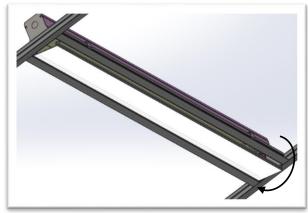


<u>Step 7</u>: Remove lens (D) starting at one end. Pull one side first, rotate and detach. Keep lens.

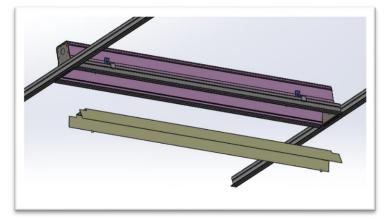


<u>Step 8</u>: Remove reflector mounting screws and reflector. Note fixtures with optional emergency pack have a test switch and indicator light mounted on the reflector.

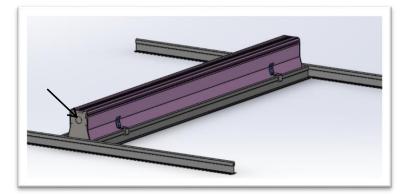


<u>Step 9:</u> Bring electrical supply to the fixture as needed. Make sure all Retaining Clips are secured and fastened.

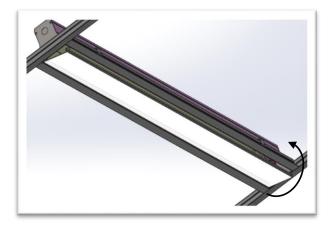

<u>Step 11:</u> Install Lamp and re-attach lens. Start with one side first and close the other side starting from the corner.

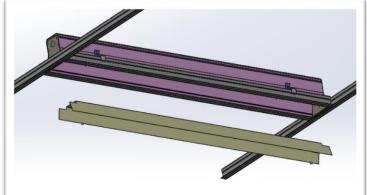

<u>Step 10:</u> Perform electrical wiring inside the fixture and re-attach reflector with (2) mounting screws. Optional emergency ballast must be fed from the same branch circuit as the AC ballast

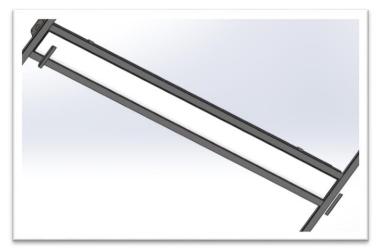


Step 12: Re-attach the filler and magnet E).

Metalumen

GRANDE RECESSED TBAR FLUORESCENT INSTALLATION INSTRUCTIONS

Step-by-step Instructions:

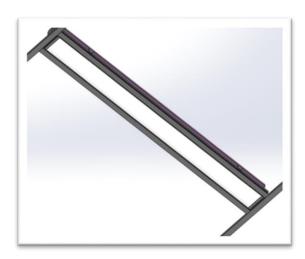

Installed Fixture (A).