


# INSTALLATION INSTRUCTIONS

## NATA

### NATAI/NATADI Single/Double Arm Pendant Integral / Remote Driver

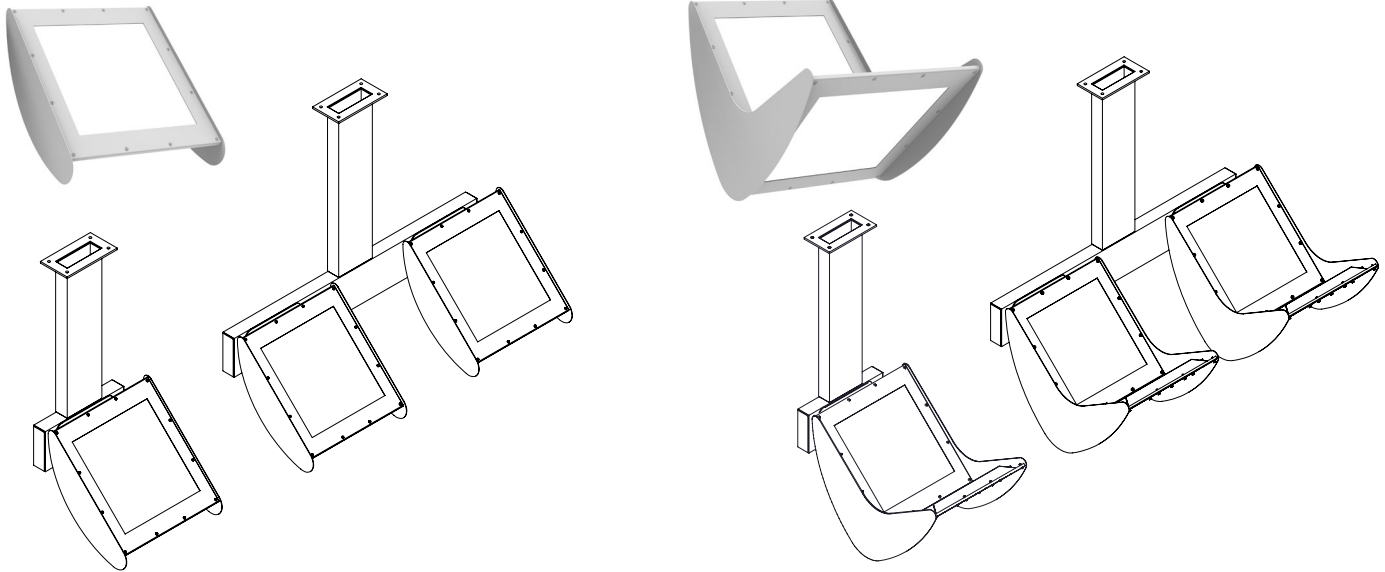

**NOTE:** The following instructions provide general guidelines for product installation. These instructions apply to NATA fixtures. For additional information consult the applicable electrical codes or contact factory directly for support before attempting anything with uncertainty.

**WARNING:** Risk of fire and electrical shock. DISCONNECT POWER AT ELECTRICAL PANEL before installing or servicing this product.

#### GENERAL SAFETY INSTRUCTIONS:

1. Read all instructions prior to installing this fixture.
2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
3. All wiring must be performed by a qualified electrician in accordance with national and local building and electrical codes.
4. This fixture must be suitably grounded for your protection against shock hazards and to assure proper operation.
5. Make sure that the power source conforms to the requirements of this fixture.
6. Class 1 luminaire.
7. Minimum installation height must be 12' from the floor.
8. Fixture can only be serviced by certified personnel.



## PARTS LIST

### NATAI



#### DIRECT-INDIRECT INTEGRAL/REMOTE DRIVER

- A. Luminaire fixture
- B. Fixture mounting bracket
- C. Arm Mounting Bracket

### SINGLE ARM

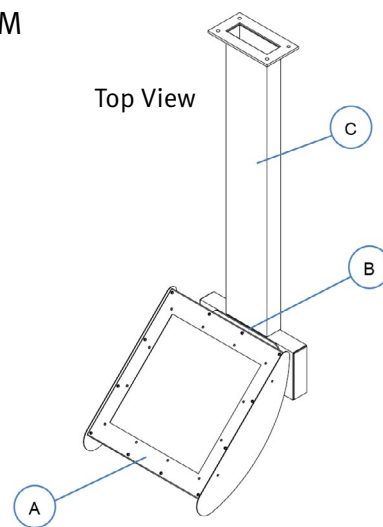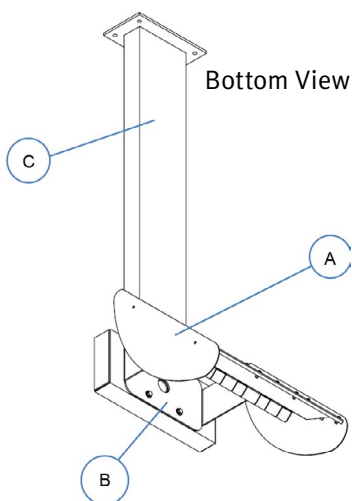

### DOUBLE ARM

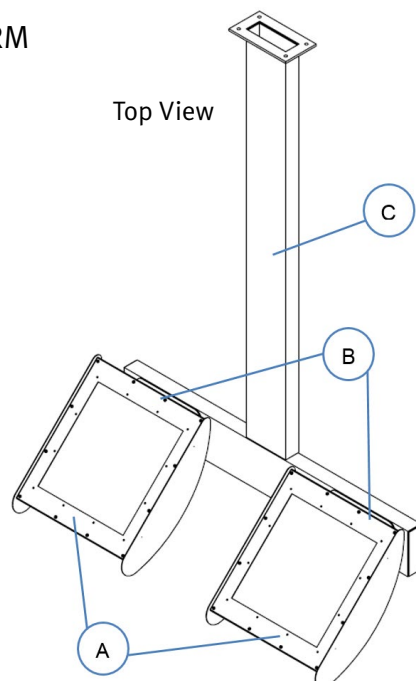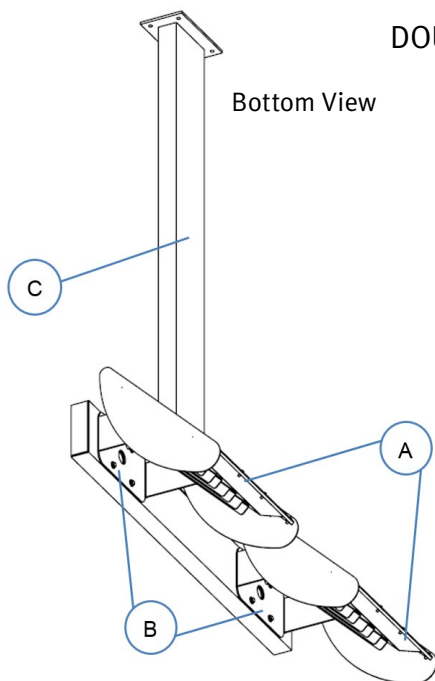



PARTS LIST

**NATADI**



**DIRECT-INDIRECT  
INTEGRAL/REMOTE DRIVER**

- A. Luminaire fixture
- B. Fixture mounting bracket
- C. Arm Mounting Bracket

**SINGLE ARM**

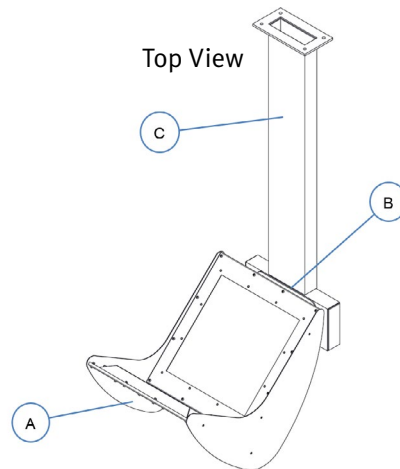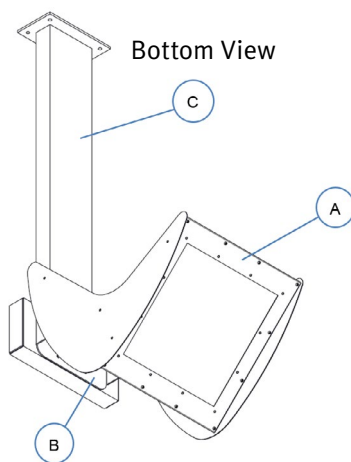

**DOUBLE ARM**

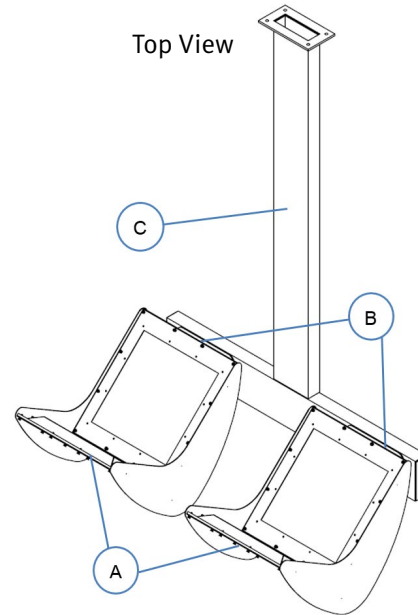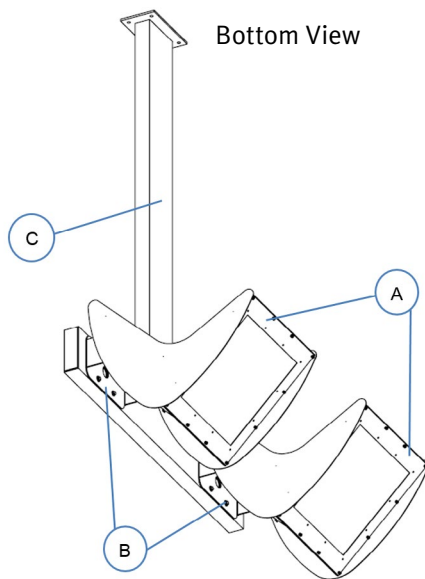

WIRING DIAGRAMS

FIGURE 1

REMOTE/INTEGRAL DRIVER TO LINE VOLTAGE



FIGURE 2

FIXTURE TO REMOTE DRIVER BOX



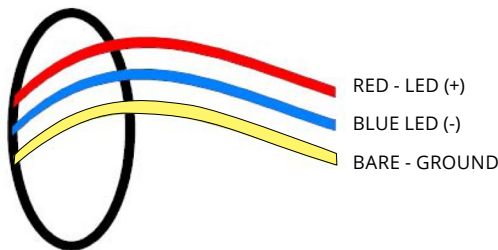


FIGURE 3

REMOTE / INTEGRAL DRIVER TO LINE VOLTAGE WITH  
UP/DOWN SWITCHING

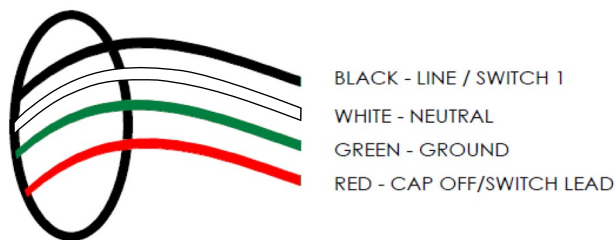


## INSTALLATION STEPS

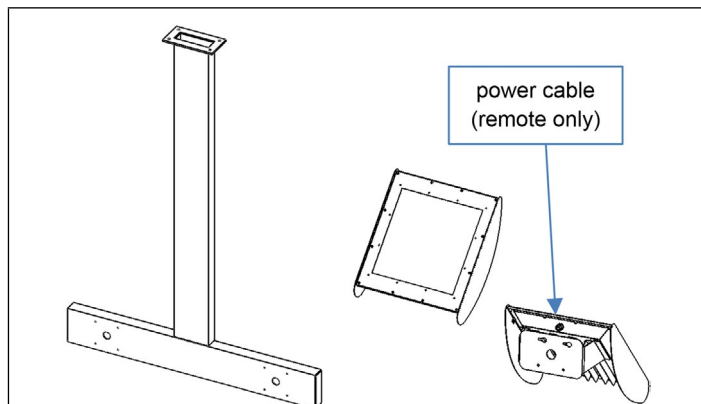


**STEP 1.** Remove fixture and mounting arm bracket kit from packaging. For remote driver, note that power cable comes out from back of fixture.

**STEP 2.** Wire fixture using waterproof wire nuts (supplied by others). Refer to provided wiring diagram. Figure1 for integral with dimming. Figure 3 for integral with up/down switching, and Figure2 for remote. Enclose wire connections into junction box (supplied by others).



**Figure 1**  
Integral with dimming

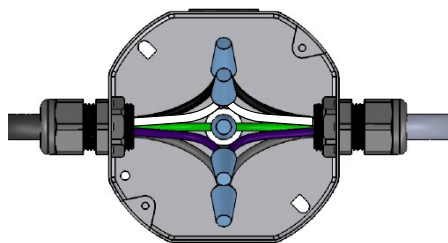


**Figure 2**  
Remote

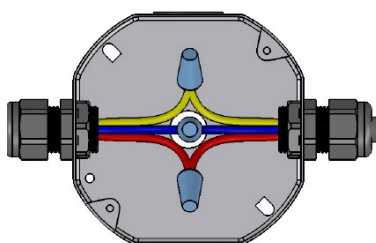

**Figure 3**  
Integral with up/down switching

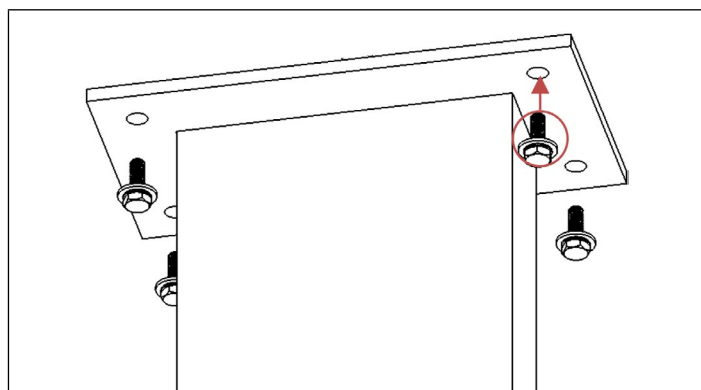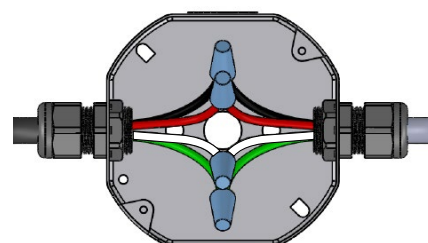


**STEP 3.** Secure mounting arm bracket onto ceiling using 1/4" structural aluminum bolts (supplied by others).

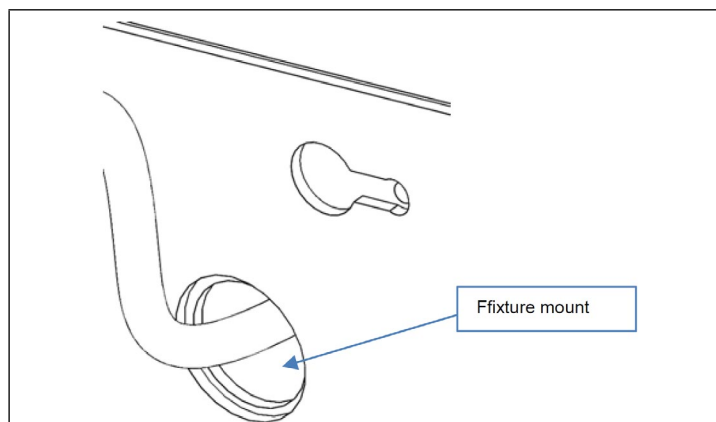


**STEP 4.** Position fixture onto mounting arm and feed cable through fixture mount hole.


## INSTALLATION STEPS

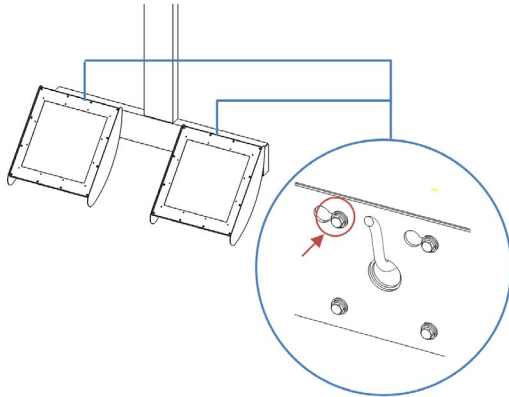


**STEP 5.** Position fixture onto bracket and secure using 1/4" structural aluminum bolts (supplied by others).

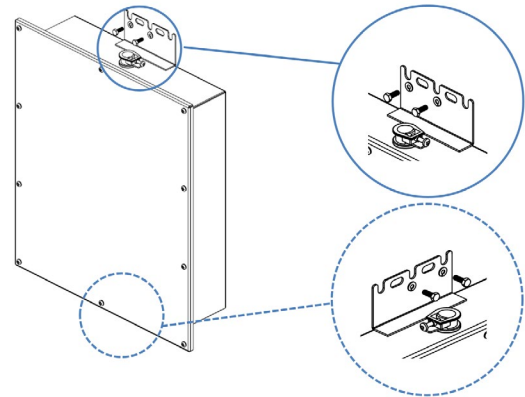


**STEP 6.** For remote driver configuration, install remote driver box at suitable location by using structural aluminum bolts, minimum of #10-24 (supplied by others). (Water tight BX-cable connector supplied by others)

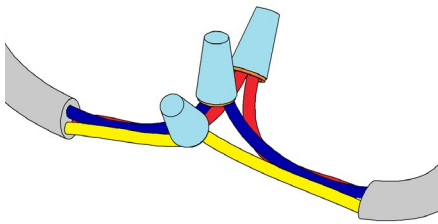

**STEP 7.** Connect wires from driver to the fixture using waterproof wire nuts (supplied by others) inside the driver box through water tight BX-cable connector (supplied by others). Refer to wiring diagram (**Figure 2**).

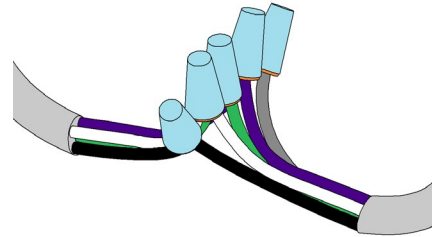

Refer to Wiring Diagram (**Figure 3**) for up/down switching

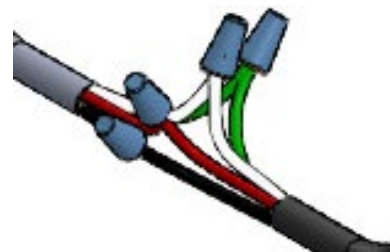

**STEP 8.** Connect wires from driver to the control panel using waterproof wire nuts (supplied by others) inside the driver box. Refer to wiring diagram (**Figure 1**) for dimming.

## MAINTENANCE

### REQUIRED TOOLS:

Plastic/Latex  
Gloves



Screwdriver




**IMPORTANT:** Use clean gloves to avoid adding oil/dirt to optics. Avoid scratching optics by using installation tools with soft plastic rounded edges.


### TO CLEAN THE OPTICS (FROM OUTSIDE ONLY):

- Gently wipe down the optics with a clean, dry cloth to remove any dust and light residues.
- For heavier smudges, spray clean cloth with mild soap and water solution and gently wipe optics surface.


**WARNING: DO NOT OPEN THE FIXTURE for cleaning purpose. Hard wiping and abrasive cloths will scratch the optics. DO NOT USE cleaning products containing alcohol or acetone which will damage the optics.**

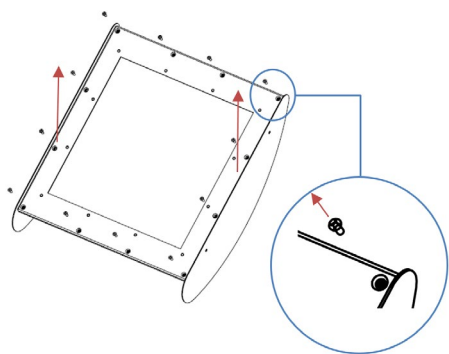


**STEP 1.** For LED board maintenance, remove the door assembly by loosening mounting screws.

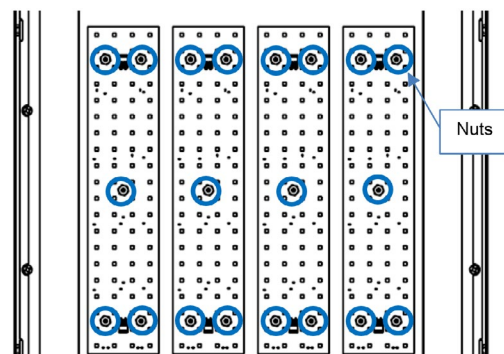

**STEP 2.** Disconnect wires from LED boards before removing them. Unscrew nuts to remove the LED boards from fixture.

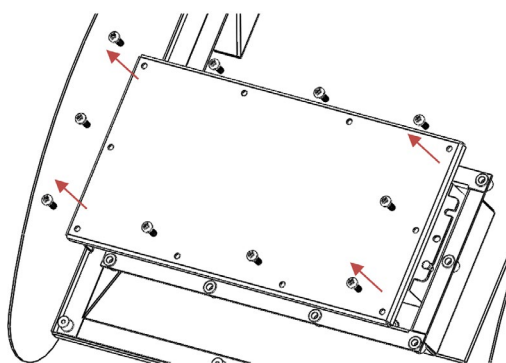

**STEP 3.** For LED driver maintenance, loosen screws that secure the driver box cover. Note that driver box is found at the back of the fixture (integral) or in remote location.

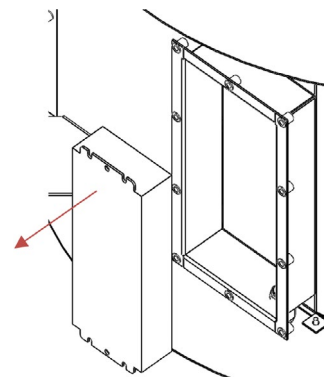

**STEP 4.** Disconnect power and wire connections. Remove and service LED driver as required.